



STAGE

Proscenium opening: 25' Wide – 9' High

Apron Front of Curtain: 5½' x 25'

Stage from proscenium opening to

Cyclorama: 22'

Wing space stage right: 11' x 22'

Wing space stage left: 8' x 22'

Ground to Lighting Rig: 12'.6"

Auditorium: 73' x 33'

Seating: 350

LIGHTING

Lightmaster XLS ZERO 88

24 Dimmer Channels 48 Circuits

FRONT OF HOUSE

16 Circuits

- 4 x 650w Prelude 16/30
- 4 x 650w Strand 28/40
- 2 x 650w Strand 15/32
- 2 x 1000w Starlette pc ctt
- 2 x 1000w Fresnel (wash)
- Spare Channels

BATTEN 1

- 12 x 650 w Strand quartets

BATTEN 2

- 3 x 1000w Parcans
- 1 x 600w Strand quartets
- 3 x 500w Pattern 23 baby mirror spots

CYCLORAMA

- 1 x 4:500w Coda
- 2 x 1:500w Coda
- 2 x 1000w Parcans
- 2 x 500w Floods
- 1 x 2:500w Halogen floods on stand
- 4 x Spare Stage Circuits

SOUND

- Behringer Control Board
- Eurorack MX 1804 x 14 Channel
- Pioneer Six Disk Player
- Sony 2 Deck Tape Record/Player
- Sony mini Disk Player
- Amplifier: Q4 Audio PTH7
- H7 2 x 700w Professional Power Amplifier